

TEXTON



DUAL
SHADES

Effective February 4, 2019

design simplified™

TABLE OF CONTENTS

Product Overview

- Features & Benefits 3
- Collection Information 4-5
- Color Chart 6

Pricing Groups

- Pricing Group 1-5 7-8
- Motorization Surcharges and Options 9

Product Specifications

- Product Specifications 10
- Finished Dimensions 11
- Simplicity Rechargeable Motorization 12
- PowerWand Motorization 13
- RemoteLift™ Motorization 14-15
- Quick Motorization Programming Guide 16
- Product Components 17-18

FEATURES & BENEFITS



- A soft shade that combines the light control of a blind with the soft beauty of a fabric shade.
- Uniquely designed fabric has alternating bands of sheer or mesh fabric with translucent or room darkening solid fabric within the same shade.
- The bands of fabric can be aligned or offset providing total light and privacy control as well as UV protection.
- Large selection of decorative styles in a wide ranging color palette to blend with any décor.
- A matching fabric insert in the headrail is standard and provides a finished look.
- Innovative bottomrail allows the fabric to slide through for precise positioning.
- Continuous cord loop is standard.
- Choose from three motorization options:
 - Simplicity Rechargeable – great option for those hard to reach places. Rechargeable battery eliminates the external battery wand.
 - PowerWand – low cost, rechargeable motorized system raises and lowers at the touch of a button on the wand.
 - RemoteLift – trouble free operation at the touch of a button.
- **NEW** Smoove 1 RTS surface mounted wall switch option now available.
- **NEW** myLink RTS Interface now available.
- Limited Lifetime Warranty ensures your customers' satisfaction.

COLLECTION INFORMATION

| | Continuous Cord Loop |
|---------------------|-----------------------------|
| Minimum Width (NET) | 15" |
| Minimum Height | 24" |

| | Simplicity Rechargeable |
|---------------------|--------------------------------|
| Minimum Width (NET) | 19" |
| Minimum Height | 20" |

| | RemoteLift |
|---------------------|-------------------|
| Minimum Width (NET) | 18" |
| Minimum Height | 24" |

| | PowerWand |
|---------------------|------------------|
| Minimum Width (NET) | 21" |
| Minimum Height | 20" |

Maximum widths and heights for continuous cord loop and battery operated motorization noted below.

| Pattern Name | Family Code | Band Height | Fabric Composition | Opacity | Maximum Width | Maximum Height | Price Group |
|--------------|-------------|-------------|---------------------------|----------------|---------------|----------------|-------------|
| Advance | DS1 | 3" | 100% Woven Polyester | Translucent | 94" | 120" | 4 |
| Anastasia | DS2 | 3" | 100% Polyester | Translucent | 100" | 120" | 4 |
| Beaumont | DS3 | 3" | 100% Polyester | Translucent | 96" | 120" | 1 |
| Cinema | DS4 | 2.75" | 85% Polyester / 15% Linen | Translucent | 92" | 120" | 3 |
| Definition | DS6 | 3" | 100% Polyester | Room Darkening | 90" | 120" | 5 |
| Diversion | DS21 | 4.625" | 100% Polyester | Room Darkening | 102" | 120" | 5 |
| Epicure | DS7 | 3" | 100% Polyester | Translucent | 100" | 120" | 3 |
| Extravagance | DS8 | 5.5" | 100% Polyester | Translucent | 100" | 120" | 4 |
| Glorious | DS18 | 4.75" | 100% Polyester | Translucent | 90" | 120" | 2 |
| Humber | DS19 | 3" | 100% Polyester | Translucent | 102" | 120" | 2 |
| Impulse | DS20 | 3" | 100% Polyester | Translucent | 90" | 96" | 2 |
| Luxury | DS10 | 3" | 100% Polyester | Translucent | 100" | 120" | 4 |
| Nomad | DS12 | 3" | 100% Polyester | Translucent | 102" | 100" | 3 |
| Obscure | DS13 | 4" | 100% Polyester | Room Darkening | 96" | 100" | 5 |
| Palladian | DS14 | 3" | 100% Polyester | Translucent | 100" | 120" | 3 |
| Reveal | DS15 | 2.75" | 100% Polyester | Translucent | 102" | 120" | 2 |
| Strande | DS16 | 2.75" | 100% Polyester | Translucent | 100" | 120" | 2 |
| Sublime | DS17 | 3" | 100% Polyester | Translucent | 90" | 100" | 2 |

SIDE-BY-SIDE VANE ALIGNMENT

When Dual Shades are installed side by side, vane alignment can be guaranteed within 3/8" only if:

- Shades are ordered at the same time and are identical style, color and height.
- Shades that need to be aligned are specified on the order form (a note must be included in Special Instructions).

ORDERING NOTE

- Finished blind height will always be in the full privacy position – with bands offset
- When you align bands to the view through position, the bottom rail will raise slightly off the window sill – the gap between the sill and bottomrail is approximately 1/2 the band width.

COLLECTION INFORMATION – 2 ON 1 HEADRAIL

Minimum Width Per Panel:

- Continuous Cord Loop – 15" NET
- 2 on 1 is not available with any Motorization System
- Center Gap – 1/2"

Minimum Height:

- All Styles – 24"

Minimum widths and heights for continuous cord loop noted below.

| Pattern Name | Family Code | Minimum Width per panel | Maximum Overall Width | Maximum Height |
|--------------|-------------|-------------------------|-----------------------|----------------|
| Advance | DS1 | 15" Net | 94" | 90" |
| Anastasia | DS2 | 15" Net | 106" | 90" |
| Beaumont | DS3 | 15" Net | 96" | 90" |
| Cinema | DS4 | 15" Net | 92" | 90" |
| Definition | DS6 | 15" Net | 106" | 90" |
| Diversion | DS21 | 15" Net | 106" | 90" |
| Epicure | DS7 | 15" Net | 106" | 90" |
| Extravagance | DS8 | 15" Net | 108" | 90" |
| Glorious | DS18 | 15" Net | 106" | 90" |
| Humber | DS19 | 15" Net | 106" | 90" |
| Impulse | DS20 | 15" Net | 106" | 90" |
| Luxury | DS10 | 15" Net | 108" | 90" |
| Nomad | DS12 | 15" Net | 106" | 90" |
| Obscure | DS13 | 15" Net | 96" | 90" |
| Palladian | DS14 | 15" Net | 106" | 90" |
| Reveal | DS15 | 15" Net | 108" | 90" |
| Strande | DS16 | 15" Net | 106" | 90" |
| Sublime | DS17 | 15" Net | 108" | 90" |

2-on-1 is not available with RemoteLift, Simplicity Rechargeable,
or PowerWand motorization

SIDE-BY-SIDE VANE ALIGNMENT

When Dual Shades are installed side by side, vane alignment can be guaranteed within 3/8" only if:

- Shades are ordered at the same time and are identical style, color and height.
- Shades that need to be aligned are specified on the order form (a note must be included in Special Instructions).

ORDERING NOTE

- Finished blind height will always be in the full privacy position – with bands offset
- When you align bands to the view through position, the bottom rail will raise slightly off the window sill – the gap between the sill and bottomrail is approximately 1/2 the band width.

COLOR CHART

| Material Name | Color Name | Color # | Cassette Color |
|---------------|------------|-----------|----------------|
| Advance | Anthracite | DS1-3310 | Black |
| Advance | Cognac | DS1-3308 | Dark Brown |
| Advance | Haze | DS1-3305 | Black |
| Advance | Mist | DS1-3301 | Silver |
| Anastasia | Cream | DS2-2302 | Beige |
| Anastasia | Honey | DS2-2303 | Beige |
| Anastasia | Ice | DS2-2301 | White |
| Beaumont | Black | DS3-2413 | Black |
| Beaumont | Bone | DS3-2402 | Beige |
| Beaumont | Café | DS3-2420 | Dark Brown |
| Beaumont | Eggplant | DS3-2429 | Black |
| Beaumont | Linen | DS3-2412 | Beige |
| Beaumont | Mushroom | DS3-2419 | Dark Brown |
| Beaumont | Pewter | DS3-2407 | Silver |
| Beaumont | Raffia | DS3-2423 | Beige |
| Beaumont | Silver | DS3-2416 | Silver |
| Beaumont | Steel | DS3-2414 | Black |
| Beaumont | White | DS3-2401 | White |
| Cinema | Bamboo | DS4-5104 | Beige |
| Cinema | Ecru | DS4-5103 | Beige |
| Cinema | Granite | DS4-5125 | Silver |
| Cinema | Linen | DS4-5122 | Beige |
| Cinema | Mesa | DS4-5124 | Dark Brown |
| Definition | Arctic | DS6-2550 | Silver |
| Definition | Charcoal | DS6-2505 | Black |
| Definition | Dusk | DS6-2503 | Silver |
| Definition | Fawn | DS6-2501 | Beige |
| Definition | Gunmetal | DS6-2504 | Silver |
| Definition | Sable | DS6-2502 | Dark Brown |
| Diversion | Arctic | DS21-6520 | Silver |
| Diversion | Ivory | DS21-6521 | Silver |
| Diversion | Fawn | DS21-6522 | Beige |
| Diversion | Sable | DS21-6523 | Dark Brown |
| Diversion | Dusk | DS21-6524 | Silver |
| Diversion | Gunmetal | DS21-6525 | Silver |
| Diversion | Charcoal | DS21-6526 | Black |
| Epicure | Coffee | DS7-9708 | Dark Brown |
| Epicure | Opal | DS7-9702 | White |
| Epicure | Quartz | DS7-9701 | White |
| Epicure | Sambuca | DS7-9713 | Black |
| Epicure | Storm | DS7-9710 | Silver |
| Epicure | Taupe | DS7-9704 | Dark Brown |

| Material Name | Color Name | Color # | Cassette Color |
|---------------|------------|-----------|----------------|
| Extravagance | Caraway | DS8-2605 | Beige |
| Extravagance | Dove | DS8-2603 | Silver |
| Extravagance | Horizon | DS8-2606 | White |
| Extravagance | Opal | DS8-2602 | Beige |
| Extravagance | Quartz | DS8-2601 | White |
| Glorious | Snow | DS18-6210 | White |
| Glorious | Canvas | DS18-6211 | Beige |
| Glorious | Malt | DS18-6212 | Dark Brown |
| Glorious | Greystone | DS18-6213 | Silver |
| Glorious | Sable | DS18-6214 | Dark Brown |
| Humber | Glacier | DS19-6300 | Silver |
| Humber | Barley | DS19-6301 | Beige |
| Humber | Pewter | DS19-6302 | Black |
| Humber | Midnight | DS19-6304 | Black |
| Impulse | Aztec | DS20-6411 | Dark Brown |
| Impulse | Onyx | DS20-6413 | Black |
| Luxury | Caraway | DS10-2805 | Beige |
| Luxury | Dove | DS10-2803 | Silver |
| Luxury | Honey | DS10-2804 | Beige |
| Luxury | Horizon | DS10-2806 | White |
| Luxury | Opal | DS10-2802 | Beige |
| Luxury | Quartz | DS10-2801 | White |
| Nomad | Coffee | DS12-5104 | Dark Brown |
| Nomad | Flannel | DS12-5101 | Silver |
| Nomad | Midnight | DS12-5103 | Black |
| Nomad | Stucco | DS12-5102 | White |
| Obscure | Acorn | DS13-2902 | Dark Brown |
| Obscure | Barley | DS13-2907 | Beige |
| Obscure | Bleach | DS13-2901 | White |
| Obscure | Hickory | DS13-2905 | Dark Brown |
| Obscure | Truffle | DS13-2909 | Dark Brown |
| Palladian | Cognac | DS14-0908 | Dark Brown |
| Palladian | Fawn | DS14-0904 | Dark Brown |
| Palladian | Glacier | DS14-0901 | White |
| Palladian | Ivory | DS14-0902 | White |
| Palladian | Shadow | DS14-0910 | Silver |
| Reveal | Beeswax | DS15-8601 | Dark Brown |
| Reveal | Espresso | DS15-8608 | Dark Brown |
| Reveal | Natural | DS15-8602 | Beige |
| Reveal | Sand | DS15-8604 | Beige |
| Reveal | Teak | DS15-8607 | Dark Brown |
| Strande | Canyon | DS16-3102 | Beige |
| Strande | Coconut | DS16-3101 | White |
| Strande | Espresso | DS16-3104 | Dark Brown |
| Strande | Java | DS16-3103 | Dark Brown |
| Sublime | Ice | DS17-6100 | White |
| Sublime | Opal | DS17-6101 | Beige |
| Sublime | Silver | DS17-6102 | Silver |
| Sublime | Charcoal | DS17-6103 | Black |
| Sublime | Coffee | DS17-6104 | Dark Brown |
| Sublime | Raven | DS17-6105 | Black |

GROUP 1

• Beaumont (96")

| WIDTH TO: | 24" | 30" | 36" | 42" | 48" | 54" | 60" | 66" | 72" | 76" | 84" | 90" | 96" |
|------------|-------|-----|-----|-----|-----|-----|-----|-----|-----|------|------|------|------|
| HEIGHT TO: | | | | | | | | | | | | | |
| 40" | \$342 | 380 | 424 | 460 | 498 | 535 | 579 | 616 | 662 | 710 | 742 | 778 | 854 |
| 50" | 355 | 395 | 440 | 480 | 520 | 562 | 610 | 648 | 698 | 750 | 782 | 823 | 903 |
| 60" | 366 | 411 | 460 | 502 | 544 | 588 | 638 | 682 | 735 | 788 | 826 | 868 | 951 |
| 70" | 376 | 426 | 475 | 523 | 570 | 614 | 668 | 714 | 770 | 828 | 867 | 914 | 1000 |
| 80" | 390 | 440 | 494 | 543 | 594 | 643 | 699 | 748 | 807 | 867 | 911 | 959 | 1048 |
| 90" | 400 | 455 | 511 | 563 | 616 | 668 | 728 | 780 | 843 | 906 | 954 | 1004 | 1096 |
| 100" | 412 | 470 | 530 | 584 | 642 | 698 | 760 | 815 | 879 | 947 | 994 | 1050 | 1144 |
| 110" | 426 | 486 | 548 | 607 | 666 | 723 | 791 | 847 | 916 | 986 | 1038 | 1096 | 1192 |
| 120" | 436 | 499 | 566 | 628 | 688 | 751 | 820 | 880 | 951 | 1024 | 1079 | 1140 | 1242 |

GROUP 2

• Glorious (90") • Humber (102") • Impulse (90") • Reveal (102") • Strande (100") • Sublime (90")

| WIDTH TO: | 24" | 30" | 36" | 42" | 48" | 54" | 60" | 66" | 72" | 76" | 84" | 90" | 96" | 102" |
|------------|-------|-----|-----|-----|-----|------|------|------|------|------|------|------|------|------|
| HEIGHT TO: | | | | | | | | | | | | | | |
| 40" | \$431 | 486 | 542 | 594 | 644 | 696 | 756 | 806 | 870 | 932 | 978 | 1028 | 1124 | 1159 |
| 50" | 451 | 510 | 571 | 627 | 684 | 740 | 806 | 862 | 930 | 999 | 1047 | 1104 | 1207 | 1244 |
| 60" | 471 | 534 | 602 | 663 | 726 | 787 | 858 | 918 | 991 | 1064 | 1119 | 1179 | 1287 | 1328 |
| 70" | 491 | 559 | 631 | 698 | 764 | 831 | 907 | 974 | 1051 | 1131 | 1190 | 1255 | 1368 | 1414 |
| 80" | 511 | 584 | 662 | 734 | 806 | 878 | 958 | 1030 | 1111 | 1198 | 1260 | 1332 | 1452 | 1498 |
| 90" | 530 | 610 | 691 | 768 | 846 | 924 | 1008 | 1083 | 1172 | 1262 | 1332 | 1408 | 1532 | 1583 |
| 100" | 551 | 635 | 722 | 804 | 886 | 968 | 1060 | 1142 | 1234 | 1328 | 1406 | 1486 | 1615 | 1668 |
| 110" | 570 | 659 | 752 | 839 | 927 | 1014 | 1110 | 1195 | 1294 | 1394 | 1475 | 1562 | 1695 | 1754 |
| 120" | 590 | 684 | 782 | 872 | 967 | 1059 | 1159 | 1251 | 1354 | 1460 | 1546 | 1636 | 1776 | 1838 |

GROUP 3

• Cinema (92") • Epicure (100") • Nomad (102") • Palladian (100")

| WIDTH TO: | 24" | 30" | 36" | 42" | 48" | 54" | 60" | 66" | 72" | 76" | 84" | 90" | 96" | 102" |
|------------|-------|-----|-----|-----|------|------|------|------|------|------|------|------|------|------|
| HEIGHT TO: | | | | | | | | | | | | | | |
| 40" | \$447 | 506 | 566 | 620 | 678 | 732 | 798 | 852 | 918 | 986 | 1035 | 1088 | 1191 | 1227 |
| 50" | 471 | 534 | 600 | 662 | 723 | 787 | 858 | 915 | 987 | 1064 | 1118 | 1179 | 1287 | 1327 |
| 60" | 494 | 563 | 636 | 703 | 771 | 839 | 914 | 980 | 1060 | 1142 | 1202 | 1268 | 1382 | 1426 |
| 70" | 516 | 591 | 671 | 744 | 819 | 891 | 974 | 1046 | 1131 | 1218 | 1284 | 1356 | 1478 | 1526 |
| 80" | 540 | 620 | 707 | 787 | 866 | 944 | 1034 | 1112 | 1203 | 1294 | 1366 | 1447 | 1572 | 1624 |
| 90" | 563 | 650 | 740 | 826 | 912 | 998 | 1094 | 1178 | 1274 | 1372 | 1450 | 1534 | 1668 | 1724 |
| 100" | 587 | 680 | 776 | 867 | 960 | 1051 | 1152 | 1243 | 1346 | 1450 | 1534 | 1624 | 1763 | 1823 |
| 110" | 610 | 708 | 811 | 908 | 1006 | 1106 | 1210 | 1308 | 1416 | 1527 | 1618 | 1712 | 1858 | 1922 |
| 120" | 631 | 738 | 846 | 950 | 1052 | 1158 | 1270 | 1372 | 1486 | 1603 | 1700 | 1803 | 1952 | 2020 |

OPTIONS: NO CHARGE – SPECIFY ON ORDER

- 2 on 1 Headrail (price as two separate shades)
- Non-wrapped bottomrail option (fabric-wrapped bottomrail standard)
- Hold-Down Brackets
- Metal Bead Chain Option

(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color. If the cassette headrail is silver, the tensioner will be white)

See page 8 for motorization surcharges

GROUP 4

• Advance (94") • Anastasia (100") • Extravagance (100") • Luxury (100")

| WIDTH TO: | 24" | 30" | 36" | 42" | 48" | 54" | 60" | 66" | 72" | 76" | 84" | 90" | 96" | 100" |
|-------------------|-------|-----|-----|------|------|------|------|------|------|------|------|------|------|------|
| HEIGHT TO: | | | | | | | | | | | | | | |
| 40" | \$482 | 548 | 619 | 682 | 747 | 811 | 883 | 948 | 1022 | 1100 | 1158 | 1220 | 1332 | 1376 |
| 50" | 511 | 584 | 663 | 735 | 807 | 879 | 962 | 1034 | 1116 | 1202 | 1267 | 1339 | 1456 | 1503 |
| 60" | 542 | 624 | 708 | 788 | 870 | 950 | 1039 | 1118 | 1208 | 1303 | 1376 | 1455 | 1582 | 1634 |
| 70" | 571 | 660 | 756 | 842 | 931 | 1019 | 1116 | 1203 | 1303 | 1402 | 1484 | 1570 | 1706 | 1763 |
| 80" | 602 | 699 | 800 | 896 | 992 | 1088 | 1194 | 1290 | 1395 | 1503 | 1592 | 1688 | 1831 | 1894 |
| 90" | 631 | 738 | 846 | 950 | 1052 | 1158 | 1270 | 1375 | 1488 | 1604 | 1700 | 1804 | 1954 | 2023 |
| 100" | 662 | 775 | 894 | 1004 | 1116 | 1227 | 1348 | 1459 | 1582 | 1706 | 1810 | 1922 | 2079 | 2152 |
| 110" | 692 | 812 | 938 | 1056 | 1178 | 1296 | 1424 | 1544 | 1672 | 1807 | 1918 | 2038 | 2204 | 2283 |
| 120" | 722 | 852 | 984 | 1111 | 1239 | 1366 | 1502 | 1628 | 1767 | 1907 | 2026 | 2155 | 2327 | 2412 |

GROUP 5

• Definition (90") • Diversion (102") • Obscure (96")

| WIDTH TO: | 24" | 30" | 36" | 42" | 48" | 54" | 60" | 66" | 72" | 76" | 84" | 90" | 96" | 102" |
|-------------------|-------|-----|------|------|------|------|------|------|------|------|------|------|------|------|
| HEIGHT TO: | | | | | | | | | | | | | | |
| 40" | \$500 | 571 | 648 | 718 | 788 | 858 | 936 | 1004 | 1086 | 1167 | 1230 | 1298 | 1416 | 1460 |
| 50" | 535 | 615 | 699 | 776 | 858 | 936 | 1022 | 1102 | 1190 | 1282 | 1354 | 1431 | 1556 | 1608 |
| 60" | 570 | 659 | 752 | 839 | 927 | 1015 | 1111 | 1198 | 1296 | 1398 | 1478 | 1564 | 1699 | 1756 |
| 70" | 604 | 702 | 804 | 900 | 998 | 1095 | 1200 | 1294 | 1402 | 1511 | 1600 | 1696 | 1840 | 1904 |
| 80" | 638 | 744 | 858 | 962 | 1068 | 1174 | 1287 | 1392 | 1507 | 1627 | 1726 | 1831 | 1982 | 2051 |
| 90" | 672 | 788 | 908 | 1022 | 1138 | 1251 | 1376 | 1490 | 1615 | 1742 | 1848 | 1962 | 2123 | 2199 |
| 100" | 707 | 831 | 962 | 1083 | 1208 | 1332 | 1464 | 1587 | 1720 | 1858 | 1972 | 2095 | 2266 | 2348 |
| 110" | 740 | 875 | 1014 | 1146 | 1279 | 1411 | 1551 | 1683 | 1827 | 1971 | 2096 | 2228 | 2407 | 2495 |
| 120" | 775 | 918 | 1066 | 1207 | 1347 | 1490 | 1639 | 1779 | 1931 | 2086 | 2219 | 2360 | 2550 | 2643 |

| OPTIONS: NO CHARGE – SPECIFY ON ORDER |
|--|
| <ul style="list-style-type: none"> • 2 on 1 Headrail (price as two separate shades) • Non-wrapped bottomrail option (fabric-wrapped bottomrail standard) • Hold-Down Brackets • Metal Bead Chain Option <p><i>(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color. If the cassette headrail is silver, the tensioner will be white)</i></p> |

See page 8 for motorization surcharges

**SIMPLICITY RECHARGEABLE AND POWERWAND OPTIONS:
EXTRA CHARGE – SPECIFY ON ORDER
USE APPROPRIATE DUAL SHADE GRID FOR SHADE PRICE, THEN ADD EXTRA CHARGE(S) BELOW.**

- Simplicity Rechargeable Motoradd \$480 per shading
 - 5 Channel Remote Control (Black or White).....(Black Part #CS5138 or White Part #CS5138W).....add \$74 each
 - Solar Paneladd \$260 each

***Motor is only available on the right side for Simplicity Rechargeable
- PowerWandadd \$200 per shading
 - PowerWand Options (must be specified):
 - 1) Control Side (Left or Right)
 - 2) Wand Color (Black or White)
 - 3) Wand Length:
 - 1 foot (12")
 - 2 feet (24")
 - 3 feet (36")
 - 4 feet (48")
 - 5 feet (60")
- Plug-in Charger (Can be used for both Simplicity Rechargeable and PowerWand).....add \$54 each

**REMOTELIFT OPTIONS: EXTRA CHARGE – SPECIFY ON ORDER (Must select RemoteLift power source* when ordering)
USE APPROPRIATE DUAL SHADE GRID FOR SHADE PRICE, THEN ADD REMOTELIFT EXTRA CHARGE(S) BELOW.
***MOTOR IS ONLY AVAILABLE ON THE RIGHT SIDE FOR REMOTELIFT.**

- Radio Frequency (RF) RemoteLift Motorization Upgrade add \$556 per shade
- Radio Frequency (RF) Remote Control – 1 Channel Part #RC445069 add \$175 each
- Radio Frequency (RF) Remote Control – 5 Channel Part #RC445079 add \$224 each
- Radio Frequency (RF) Remote Control – 16 Channel ** available as a separate part order only**..... Part #1811081..... add \$806 each
- Radio Frequency (RF) Remote Control – Telis Modulis 1 Channel Part #1811234..... add \$334 each
- Radio Frequency (RF) Remote Control – Telis Modulis 5 Channel Part #1811235..... add \$378 each
- Radio Frequency (RF) Wireless Wall Switch – 1 Channel Part #1810897 add \$444 each
- Radio Frequency (RF) Wireless Wall Switch – 5 Channel Part #1810813 add \$444 each
- Radio Frequency (RF) Programmable Timer – 1 Channel..... Part #1805237A add \$707 each
- RTS – Smoove 1 RTS..... Part #1811533 add \$230 each
- RTS – myLink RTS interface..... Part #1811403 add \$659 each
- Radio Frequency (RF) Reloadable Single Battery Wand** Part #RC445268 add \$238 each
- Radio Frequency (RF) Reloadable Dual Battery Wand** Part #RC445268 add \$480 each
- Dual Wand Y Harness (required)..... Part #9018625 add \$19 each
- Radio Frequency (RF) Transformer..... Part #1822445 add \$239 each
- Radio Frequency (RF) Battery Wand Extension Wire – 10”..... Part #9018686A..... add \$18 each
- Radio Frequency (RF) Battery Wand Extension Wire – 48”..... Part #9016736 add \$24 each
- Radio Frequency (RF) Battery Wand Extension Wire – 96”..... Part #9018624 add \$32 each
- Radio Frequency (RF) Lithium Batteries (Reloadable Wand – 8 each)..... Part #9014834 add \$79 each
- Solar Recharge Kit (**batteries NOT included**)Part #9019034.....add \$436 each
(Includes solar panel, 10" Y harness, 12v reloadable battery tube, tube mounting clips, glass mount adhesive tape, solar panel mounting brackets – 4 qty.)
- NiMh Rechargeable Batteries (quantity of 10).....Part #9018621.....add \$123 each
- Plug-in AC Battery Rapid Charger (for solar recharge kit only) (includes 12" cable).....Part #9018620.....add \$432 each
- 48" Extension Cable for Y HarnessPart #9016374.....add \$28 each


Notes: * RemoteLift power source options: Reloadable Single Battery Wand, Reloadable Dual Battery Wand, and Transformer (plugs into standard wall outlet)
 ** Each Reloadable Battery Wand comes with a set of 8 AA lithium batteries on initial shade orders. The part numbers above reference the battery wands only. The part # for replacement pack of 8 AA lithium batteries is #9014834.

When ordering multiple motorized shades/remotes, please provide programming instructions. Otherwise, all shades will be programmed to one remote.

PRODUCT SPECIFICATIONS

Cassette Measurement

- 3-5/8" wide x 3" high



Mounting Requirements

Inside Mount

- Minimum shallow mounting surface: 1-1/2"
- Minimum flush inside mounting including brackets for cassette: 3-3/4"

Outside Mount

- Minimum outside mount surface: 1-1/2"

Hardware Colors

Cassette available in white, beige, black, dark brown and anodized silver.

- A matching fabric insert in headrail is a standard feature
Please Note: on certain fabrics with narrower bands, the fabric insert will feature both the solid fabric and the sheer.
- Fabric-wrapped bottomrail is a standard feature (non-wrapped bottomrail optional)
- Universal metal bracket will be supplied
- Cord loops and tensioners are color-coordinated


Metal Bead Chain Option

- Metal Chain optional in the following colors: White, Black, Antique Brass, Oil Rubbed Bronze, Stainless Steel, and Nickel
(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color. If the cassette headrail is silver, the tensioner will be white)

Cord Loop, Metal Beaded Chain Lengths

| SHADE HEIGHT | LOOP DROP |
|----------------|-----------|
| 24" - 39 7/8" | 24" loop |
| 40" - 59 7/8" | 36" loop |
| 60" - 83 7/8" | 48" loop |
| 84" - 107 7/8" | 60" loop |
| 108" - 120" | 72" loop |

Please Note: Environmental conditions, such as heat, humidity, etc., may result in light bowing, puckering and dimpling of the fabric which is considered normal. Some fabrics may lightly fray which is considered normal and within specifications.

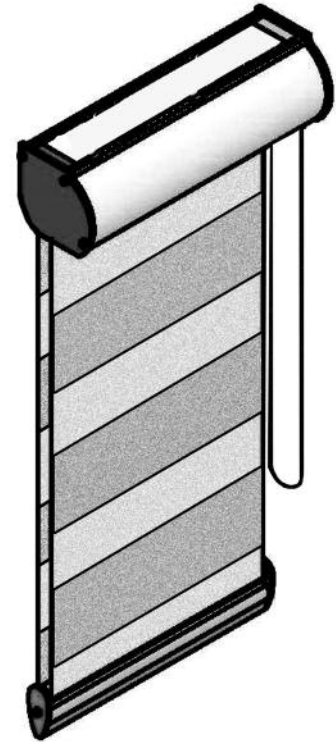

FINISHED DIMENSIONS

| | Continuous Cord Loop | RemoteLift | Simplicity Rechargeable | PowerWand |
|-------------------------|----------------------|---------------|-------------------------|---------------|
| INSIDE MOUNT | | | | |
| Cassette width | minus 1/4" | minus 1/4" | minus 1/8" | minus 1/8" |
| Tube Width | minus 1-1/8" | minus 1-1/8" | minus 1" | minus 1" |
| Fabric width | minus 1-1/4" | minus 1-1/4" | minus 1-1/8" | minus 1-1/8" |
| Bottom rail outer width | minus 1-3/16" | minus 1-3/16" | minus 1-1/16" | minus 1-1/16" |
| Bottom rail inner width | minus 1-3/8" | minus 1-3/8" | minus 1-1/4" | minus 1-1/4" |

Deductions noted are taken from **Ordered Width**

| | Continuous Cord Loop | RemoteLift | Simplicity Rechargeable | PowerWand |
|-------------------------|----------------------|---------------|-------------------------|---------------|
| OUTSIDE MOUNT | | | | |
| Cassette width | ordered width | ordered width | ordered width | ordered width |
| Tube Width | minus 7/8" | minus 7/8" | minus 7/8" | minus 7/8" |
| Fabric width | minus 1" | minus 1" | minus 1" | minus 1" |
| Bottom rail outer width | minus 5/16" | minus 5/16" | minus 5/16" | minus 5/16" |
| Bottom rail inner width | minus 1-1/8" | minus 1-1/8" | minus 1-1/8" | minus 1-1/8" |

Deductions noted are taken from **Ordered Width**


For IB and OB, Shade Height is **Ordered Height**

| | Continuous Cord Loop | RemoteLift | Simplicity Rechargeable | PowerWand |
|---------------------|----------------------|------------|-------------------------|-----------|
| Minimum Width (NET) | 15" | 18" | 19" | 21" |
| Minimum Height | 24" | 24" | 20" | 20" |

SIMPLICITY RECHARGEABLE MOTORIZATION: OVERVIEW

Simplicity Rechargeable

- The Rechargeable Simplicity motor program features an integrated rechargeable lithium ion battery in the motor casing and is fully concealed by the inner tube.
- Rechargeable battery is included with the motor. The average battery charge will last 6-12 months based on an average sized shade raised and lowered once per day. The life of the battery charge will vary based on the type of window covering selected, the size and weight of the window covering and the number of times the shade is operated on a daily basis. The battery can be recharged up to 500 times. It takes approximately 5 hours to recharge the motor when fully depleted.

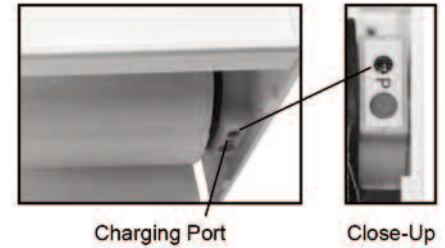

Battery Charger

- An 8.4 Volt charger requires a standard power outlet to recharge the battery. The charger must be specified when ordering Simplicity Rechargeable Motorized shade option. The charger plugs into the charging port of the motor. The charger is black and comes with a 156" wire. The dimensions are 1" wide x 2-1/2" length x 1-3/4" deep. Sold separately.



Solar Panel Recharge Option

- Plugs in to any Simplicity Rechargeable motorized shading (does not work with PowerWand). Provides constant trickle charge to 7.4v Li-ION Rechargeable battery packs. Does not require direct sunlight, but performs best in regular direct sunlight applications. Will prolong the life of the charge of the 7.4v rechargeable battery packs, and in some applications will maintain charge indefinitely.
- Life of charge is subject to application variables such as, size and weight of shade, frequency of use, amount of direct sunlight exposure, etc.



5 Channel Remote

- The remote can operate up to five shadings simultaneously, individually or in groups. Remotes and holders are available in white or black. The remote comes with a holder which can be mounted to a wall for easy storage. The range of the remote is approximately 80 feet.



Please Note:

- Motor is only available on the right side.
- Not all motors run at the same rate of speed.
- Simplicity motors have a "Favorites" position setting. To set a "Favorites" position, follow instructions provided in the installation instructions.

POWERWAND MOTORIZATION: OVERVIEW

PowerWand™ Motorization


- Dual Shades can be fabricated with the PowerWand Rechargeable Push Button Control option. The PowerWand Rechargeable option is an easy, cord free motorized operation for the budget savvy homeowner. PowerWand Rechargeable uses Simplicity motors and components.

PowerWand Rechargeable Shades Operation

- Press the up or down button on the pendant to raise or lower the shading to your desired position. No programming is required with PowerWand as upper and lower limits are set at the factory. If desired, upper and lower limits can be adjusted in the field.
- Please refer to the installation instructions for instructions on resetting the upper and lower limits and setting a favorites position can be programmed on-site.

PowerWand Appearance

- The PowerWand Rechargeable wand and pendant is attached to the head rail and requires no additional mounting.
- The wand and pendant hangs down the front of the shades from the head rail.
- Pendant is 2-1/2" long.
- The pendant does not need to be mounted to the wall to operate the shade.

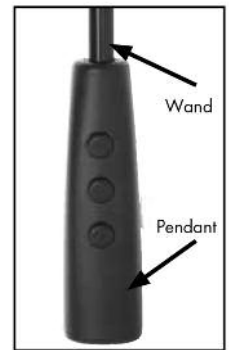

PowerWand Options

- Wand is available in Black or White (there is no default)
- Wand is available in 1 foot increments from 1 to 5 feet (there is no default)
- Wand is available on either the right or left side of the shade (there is no default)



White



Black Shown with
Plug-In Charger

PowerWand Battery Life

- The battery life will vary based on the type of window covering selected, the size and weight of the window covering and the number of times you operate the blind on a daily basis.

Battery Charger

- 8.4 Volt charger requires a standard power outlet to recharge the battery. The charger must be specified when ordering the PowerWand motorization option. The charger plugs into the charger port on the side of the pendant. The charger is black and comes with a 156" wire. The dimensions are 1" wide x 2-1/2" length x 1-3/4" deep.



REMOTELIFT™ MOTORIZATION: OVERVIEW

With RemoteLift™ motorized shades, enjoy a better quality of life and have more time to enjoy life's daily pleasures. At the touch of a button, window coverings can be instantly adjusted to changing activities or the varying sun conditions.



An ideal solution is to manage glare with a RemoteLift hand-held remote control. At the simple touch of a button, shades will open or close to adjust to the changing sunlight in a room.



RemoteLift Radio Frequency (RF) motorized shades provide ultra-quiet operation. The system can operate shades from virtually anywhere in the house without direct line of sight. Similar to how a garage door opener operates, radio signals travel through walls and make it possible to control multiple coverings throughout the home alone or as a group. The RF system is also available in a 5-channel version. The multi-channel RF system allows for independent control of individual shades and/or group control.

RemoteLift motorization systems provide many benefits, such as improving energy efficiency, providing easily controllable privacy and also enhancing home security.



The RemoteLift RF timer allows users to program specific times of the day to automatically adjust shades in different areas of the house, protecting interiors from the fading effects of direct sunlight. This feature provides added security to an unoccupied home by creating a lived in look even while homeowners are away on vacation.



The battery powered RemoteLift RF wireless wall switch allows shades to be controlled when entering or exiting a room, just like the lights. The switch may be seamlessly installed without wiring next to any light switch or stand alone, and is never misplaced. This one touch privacy helps create the ideal environment whether preparing for a bath, relaxing in bed or enjoying time with the family at home.



The Smoove® 1 RTS surface-mounted wall switch avoids cutting into drywall. This single channel, battery-operated solution is easy to install, and doesn't require an electrician. It's an intuitive, surface mount control.



The myLink™ RTS Smartphone and Tablet Interface is a WiFi to Radio Technology Somfy® (RTS) bridge that can control up to 5 channels of RTS motorized products using the Somfy myLink apps for iOS and Android devices. Through the app, users can send immediate RTS commands, create scenes (a group of motorized products working together) and schedules (timed events). Users may access their myLinks from anywhere with the app's remote access feature. Though the myLink is a single-zone controller, multiple myLinks can be joined within the same system for multi-zone control.

RemoteLift motorized shades are powered by Somfy, an industry leader in automated window coverings. All motorized products are backed by a 5 year warranty.



REMOTELIFT™ MOTORIZATION: FEATURES & OPTIONS

















RADIO FREQUENCY (RF) MOTORIZATION FEATURES:

- Highest quality patent protected design by Somfy
- Advanced motor, capable of lifting shades up to 12 LBS.
- Quiet operation
- Motor is fully enclosed within the headrail
- Installs with standard installation hardware
- RF motor is programmable



Note: The power source must be selected when ordering. The options are: reloadable single or dual battery wand, and the plug-in transformer.

| | |
|---|---|
|  <p>Radio Frequency (RF) RemoteLift Motor Motor (Part #1002481) Crown (Part #9018588A) Drive (Part #9018477)</p> | <ul style="list-style-type: none"> • Fully concealed motor unit • Flexible and programmable operation • 12 Volt System • Motor is only available on the right side |
|  <p>Radio Frequency (RF) Remote Control (must order separately) Color: 2 tone white and gray 2 Types: programmable 1-channel and programmable 5-channel (1-Channel: Part #RC445069) (5-Channel: Part #RC445079) (Telis Modulus 5-Channel: Part #1811235) (16-Channel: Part #1811081 – available as a separate part order only)</p> | <ul style="list-style-type: none"> • Controls shade operation • Programmable features • Easy shade positioning up to 90 feet away • 5-channel remote allows for multiple and independent shade operation • 5-channel remote programming can be done by special request prior to shipping. Contact customer service with your programming instructions otherwise all shades will be programmed on channel 1. |
|  <p>Single Battery Wand (reloadable) and Installation Clips Wand (Part #RC445268) Clips (Part #9013263) 8 AA Lithium Batteries (not shown) (Part #9014834)</p> | <ul style="list-style-type: none"> • On initial shade orders, the reloadable wand comes with 8 AA lithium batteries • Comes with mounting installation clips • For parts ordering the reloadable wand INCLUDING 8 AA lithium batteries, order both part #s • Replacement 8 AA lithium batteries may also be ordered separately |
|  <p>Optional, Dual Battery Wand (reloadable) and Installation Clips (Part #RC445268) (Clips: Part #9013263) (Y-Harness: Part #9018625) (Y-Harness Ext. Cable: Part #9016374)</p> | <ul style="list-style-type: none"> • On initial shade orders, the reloadable wands come with 16 AA lithium batteries • Combines (reloadable) Single Battery Wands for added lifting capacity and/or extended life • Comes with mounting installation clips |
|  <p>Transformer 10' Cable (Part #1822445)</p> | <ul style="list-style-type: none"> • Plug-in operation, no batteries required • Works in standard wall outlet (10' wire length) |
|  <p>Battery Wand Extension Cables Color: White (10" Cable: Part #9018686A) (48" Cable: Part #9016736) (96" Cable: Part #9018624)</p> | <ul style="list-style-type: none"> • Available in 10", 48" and 96" • Allows battery wand installation away from headrail |
|  <p>Wireless Wall Switch Color: white 2 Types: programmable 1-channel and 5-channel (1 Channel: Part #1810897) (5 Channel: Part #1810813)</p> | <ul style="list-style-type: none"> • Control wireless operation from the wall up to 90 feet away • Works like turning a light on/off |
|  <p>Programmable Timer 1 Type: programmable 1-channel (Part #1805176)</p> | <ul style="list-style-type: none"> • Program operation based on pre-set times • Excellent home security feature |
|  <p>Smoove 1 RTS – single channel surface mount control Color: Pure (Part #1811533)</p> | <ul style="list-style-type: none"> • Battery operated • Tactile buttons for UP/DOWN/MY/STOP control • LED for visual feedback |
|  <p>myLink Interface Color: White (Part #1811403)</p> | <ul style="list-style-type: none"> • Smartphone and Tablet Interface 120V AC • App Control • Remote Access • Compatible and controls all Radio Technology Somfy RTS products. • Can control up to 5 channels of RTS motorized products using myLink apps for iOS and android devices. |
| <p>WireFree™ Solar Pack Kit – Batteries NOT included (Part #9019034)</p> <p>Photovoltaic Panel </p> <p>"Y" Harness (Part #9018625) </p> <p>Battery + Battery Tube (Part #9018621) </p> <p>Accessories Plug-in AC battery (Part #9018620) rapid charger (required for charging battery prior to installation) </p> | <ul style="list-style-type: none"> • Uses sunlight to power a motorized shade. • Easy to install. Low profile, easy to conceal. • Solar Recharge Kit (batteries NOT included) (Part #9019034) – Includes solar panel, 10" Y harness, 12v reloadable battery tube, tube mounting clips, glass mount adhesive tape, solar panel mounting brackets – 4 qty.) • NiMH Rechargeable Batteries (quantity of 10) (Part #9018621) • Plug-in AC Battery Rapid Charger (for solar recharge kit only) (includes 12" cable) (Part #9018620) • 48" Extension Cable for Y Harness (Part #9016736) |

QUICK MOTORIZATION PROGRAMMING GUIDE

Programming Mode

Before you begin

Motors are shipped without limit settings and transmitter ID's. Steps 1 to 7 must be completed to ensure proper shade programming and functionality. Power should ONLY be connected to current shade being programmed. All other shades should be disconnected from their respective power while programming

STEP 1: Connect power

With the motor installed in shade, connect power to the motor



STEP 2: Initiate programming

Press both and at the same time until the shade jogs. **A jog is a brief up and down motion.** In Programming Mode, the shade will move only when the or is held



STEP 3: Check directions

Press or . When pressing product should go down or out. To change direction press and hold (Stop) until the shade jogs. **A jog is a brief up and down motion.**



STEP 4: Set the limits

Bring the shade to desired **upper** limit stop point. Press both (Stop) and until the motor moves, then release. (If the shade stops when the buttons are released take it back to the upper limit and repeat) Stop the motor when reaching the desired **lower** limit. You can adjust by pressing or



STEP 5: Set the limits

Press both (Stop) and at the same time until the shade moves, then release. The shade will stop at the original upper limit.



STEP 6: Confirm limit settings

Press and hold (stop) until the shade jogs to confirm the limit settings. **A jog is a brief up and down motion.**



STEP 7: Set user mode

Press and hold the programming button on the back of the transmitter until the shade jogs. The shade is now in User Mode. In User Mode, the shade will operate with a brief press on or Double check limit settings as a precaution.

Adjusting the limits in User Mode



To change the lower limit

Send the shade to it's current lower limit.



Press both and at the same time until the shade jogs. Adjust to a new lower limit position.

Press until the shade jogs



To change the upper limit

Send the shade to it's current upper limit.



Press both and at the same time until the shade jogs. Adjust to a new upper limit position.

Press until the shade jogs



Setting an Intermediate Position (Preferred Position)

Setting

Press the or to operate shade. At the desired intermediate (preferred) position press (Stop) to stop the shade.

Once the desired Intermediate position is reached, Press and hold (stop) until the shade jogs. The Intermediate position is now added to memory



Using

Send the shade to the intermediate position by pressing (stop) from ANY shade position.

Note: Shade should be stationary prior to activating intermediate position function.

Note

If shade is actively moving (in-motion) Should be pressed twice.

To Delete: Activate shade to intermediate position, then press and hold (stop) for 5 seconds. Shade will jog to confirm deletion.

Adding or deleting a Transmitter or a Channel



Programmed Transmitter

STEP 1: Using already programmed transmitters select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter.

STEP 2: Press and hold the programming button of that transmitter until the shade jogs.


Transmitter to add or delete

STEP 3: Select the transmitter (single channel) or the channel, (1-5) of a multi-channel transmitter, to be added or deleted.


STEP 4: Press and hold the programming button of that transmitter until the shade jogs.



PRODUCT COMPONENTS – STANDARD

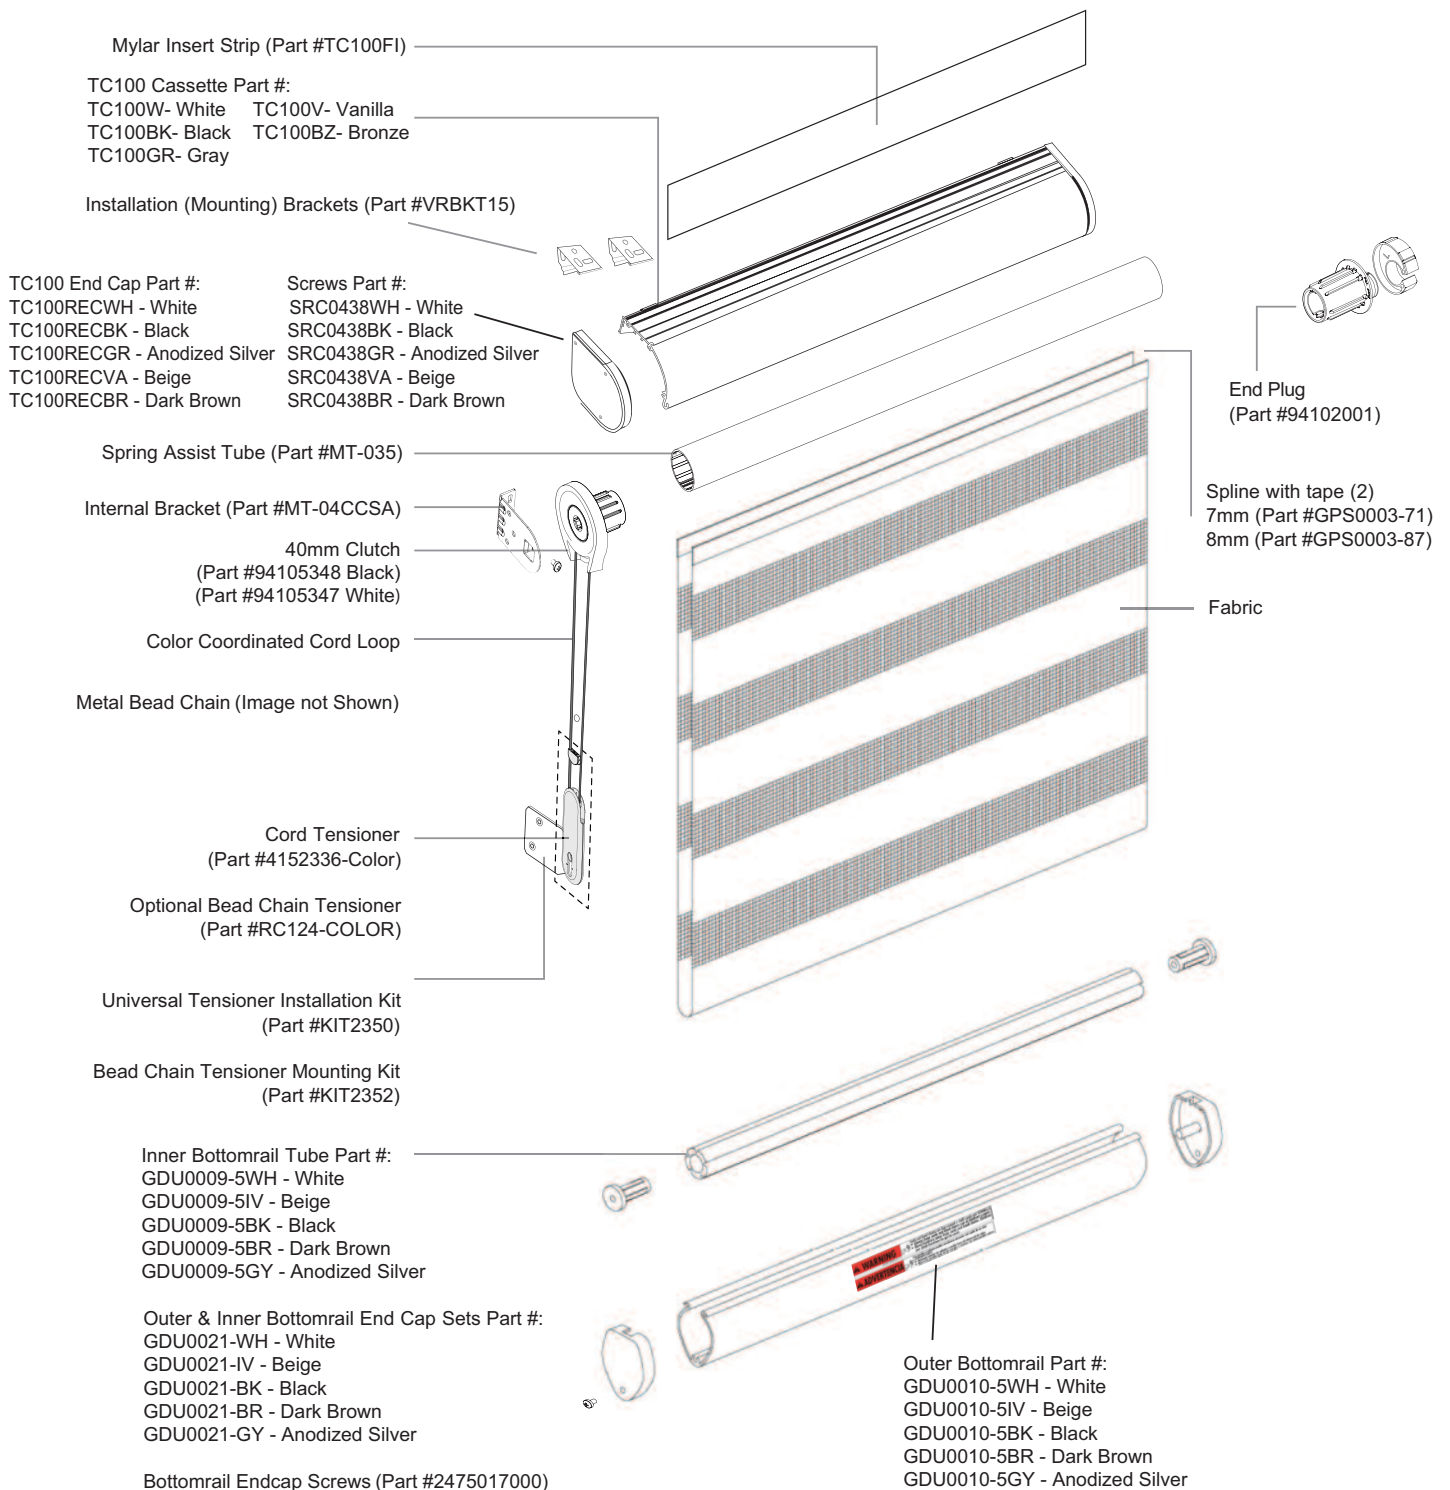

PRODUCT COMPONENTS – SIMPLICITY RECHARGEABLE MOTORIZATION

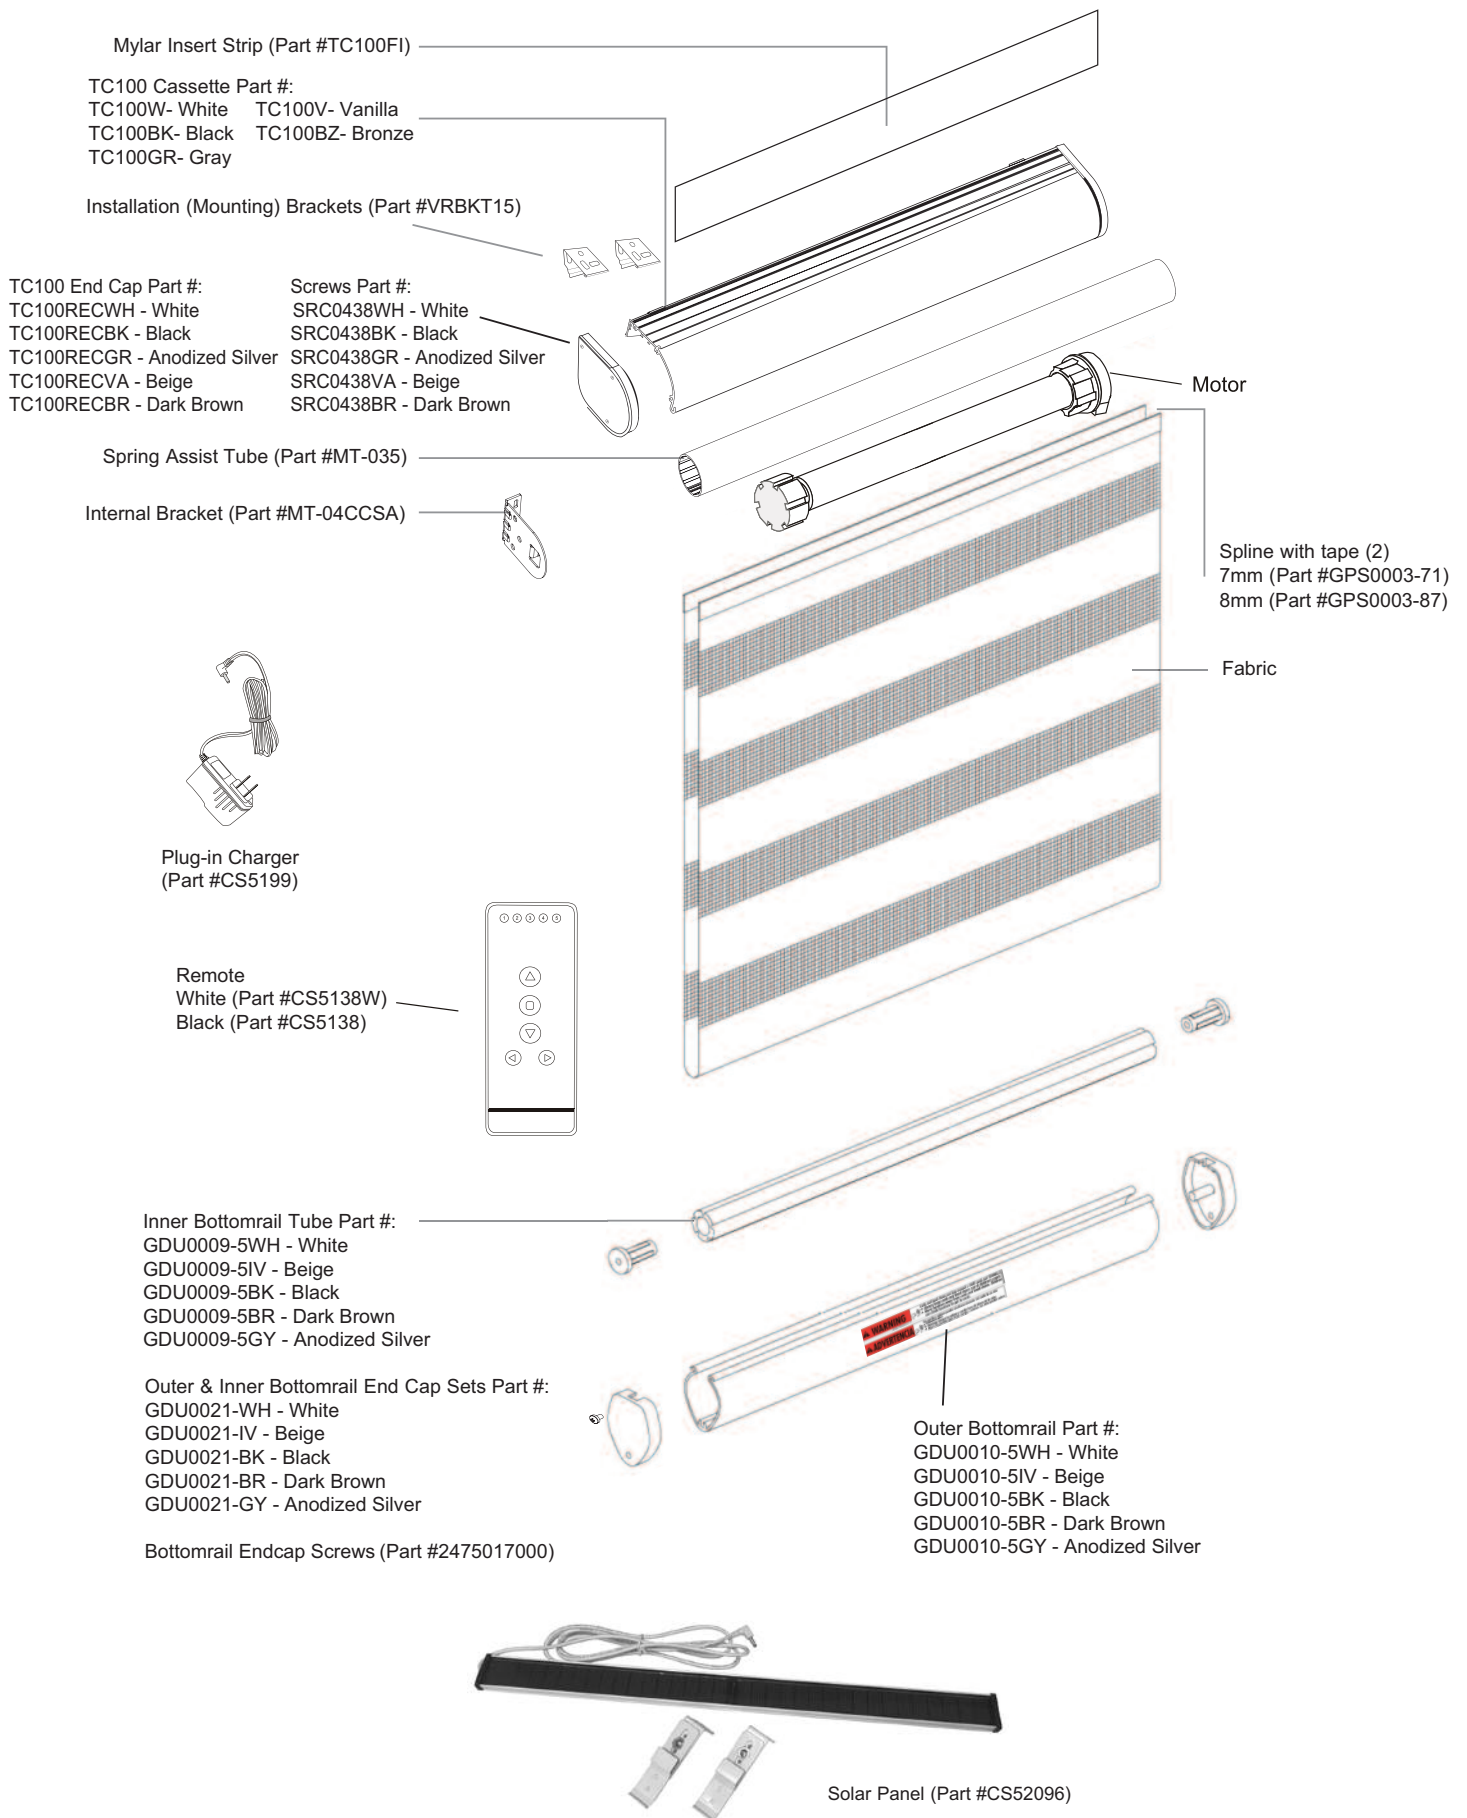

PRODUCT COMPONENTS – POWERWAND MOTORIZATION

